




ELEGANCE SCREENS

Symphony – Fixed Frame Screen

Installation Guide

Table of Contents

 Introduction.....	2
How to Construct the Screen	2
Installation	3
Cleaning and Maintenance.....	3
Warranty.....	4



Introduction

Thank you for choosing Elegance Screens. Please read this manual carefully before installing your new screen. Please ensure that your projector is installed correctly and is projecting from the right distance. Read the manual and follow the instructions to ensure optimum performance from your screen. This will eliminate the need to reposition the screen or your projector in the future.



- When possible unroll the screen material and allow it to settle to the room's temperature overnight before stretching. This will make stretching easier.

How to Construct

Contents of Box:

4 x Metal Rods
4 x Corner Braces
16 x Fasten Screws
8 x Brace Strips
2 x Wall Mounts
1 x Screen Material
4 x Velour Fixed frame sides
20 x Plastic Bullet

Insert the 2 wall mounting bracket pieces along the outer groove of a horizontal frame piece. These pieces are to be aligned where you would like to position the screen in relation to the wall.

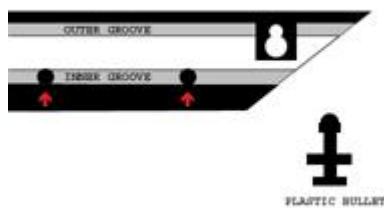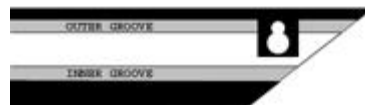

Insert the plastic bullets along the inner groove of the fixed frame, moving each bullet (round side facing up) into position just below the red arrows marked by stickers, or thereabouts approximately.

Loosen the screws in the metal brace and slide into the frame. Repeat on all frame ends. Slide corner strips on each corner of the screen. Tighten the screws securely. This will ensure the screen always remains straight and sturdy.



Roll out the screen material (white side facing down) flat on to the frame. Insert rods into the material, ensuring that they run through the outer edge of the screen. Fasten the material by stretching it, so that the holes go over the bullets as installed earlier. (you may need two people to stretch the material)



Installation

After construction, drill two screws, aligned in height and within the width of the screen into the secure parts on your wall. These secure areas include timber beams or metal frames behind the wall. Now align your screws with the brackets and hang on the wall.

Cleaning & Maintenance

In the event that the screen becomes dirty over time, please read the following instructions. If there are visible marks on the screen, clean the surface using a clean cloth and warm water. A small amount of white soap can also be mixed with the warm water. Rub the cloth lightly on affected areas until marks are gone. Then dab dry the wet area with a clean dry cloth. Also ensure that the cloth used does not leak run color. Do NOT use washing detergents, bleaches, grainy or pasty cleaning agents, or any oil or wax based agents.

Warranty

All Elegance Screens carry a limited warranty backed by Elegance Screens Australia. All products are warranted for 1 year through to 2 years. Please see below for details. All products found to be faulty in materials or craftsmanship will be either repaired or replaced by Elegance Screens Australia at their discretion. Any fault determined as a result of consumer misuse or damage will not be covered by warranty. The screens must be kept in a suitable environment for which it was intended. Customers MUST retain the warranty form and proof of purchase to be eligible for repair or replacement.

WARRANTY PERIOD*

Product		Product - Frame	Product - Material
Symphony		2 years	1 year
Paramount		2 years	1 year
Granduer		1 year	1 year
PureView	Fixed	2 years	1 year
	Electric	2 years	1 year
Custom/Commerical		1 year	1 year

** All screens here mentioned carry a one year warranty on both the screen and frame when used commercially*

Elegance Screens Warranty Registration Form

Name:	
Address:	
City:	State:
Phone: ()	
Screen Model and Size:	
Screen Purchased From:	
Date Purchased:	

ELEGANCE SCREENS

Installation Guide

© Elegance Screens
4/4 Wrightland Place
Arndell Park, NSW 2148
Australia
Ph: (02) 8840 0021
Fax: (02) 8246 6344
www.elegancescreens.com.au
enquiry@elegancescreens.com.au
