


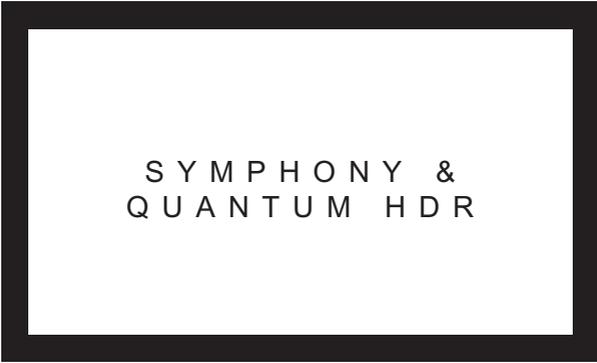

Startup Guide



Fixed Frame Projector Screen

Thank you for choosing Elegance Screens. Please read this manual carefully before installing your new screen. Please ensure that your projector is installed correctly and is projecting from the right distance. Read the manual and follow the instructions to ensure optimum performance from your screen. This will eliminate the need to reposition the screen or your projector in the future

When possible unroll the screen material and allow it to settle to the room's temperature overnight before stretching. This will make stretching easier.

What's in the box

A




Plastic Bullet
(20pcs)

B




Corner braces (4pcs)

C

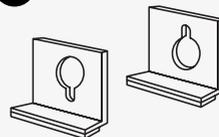

Wall mount brackets
(4pcs)

D

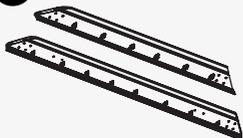

Velour fixed frame sides
(4pcs)

E




Metal rods (4pcs)

F



Screen material (1pc)

Tools required

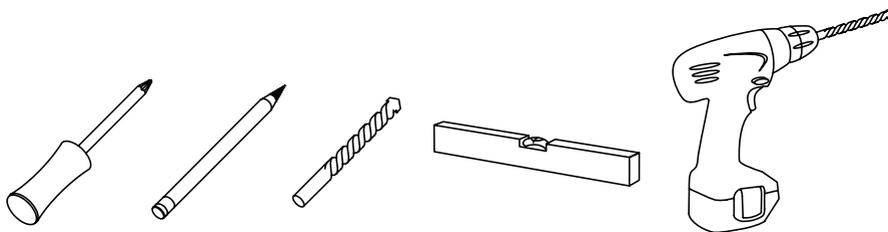

⚠ Warning

Read and follow all instructions and warnings in this manual. Keep future reference.

Ignore the safety warnings may lead to injuries and/or damaging the product.


Fixtures should be installed in a secure place to avoid accidents or the screen falling.

Please contact your local dealer for repairs or maintenance. Please contact our company if you have any further questions. Avoid taking apart the fixtures yourself. Loose parts may cause the screen to fail.


Installation

Insert the plastic bullets along the inner groove of the fixed frame, moving each bullet (round side facing up) into position just below the red arrows marked by stickers, or thereabouts approximately.


Insert the 2 wall mounting bracket pieces along the outer groove of a horizontal frame piece. These pieces are to be aligned where you would like to position the screen in relation to the wall.

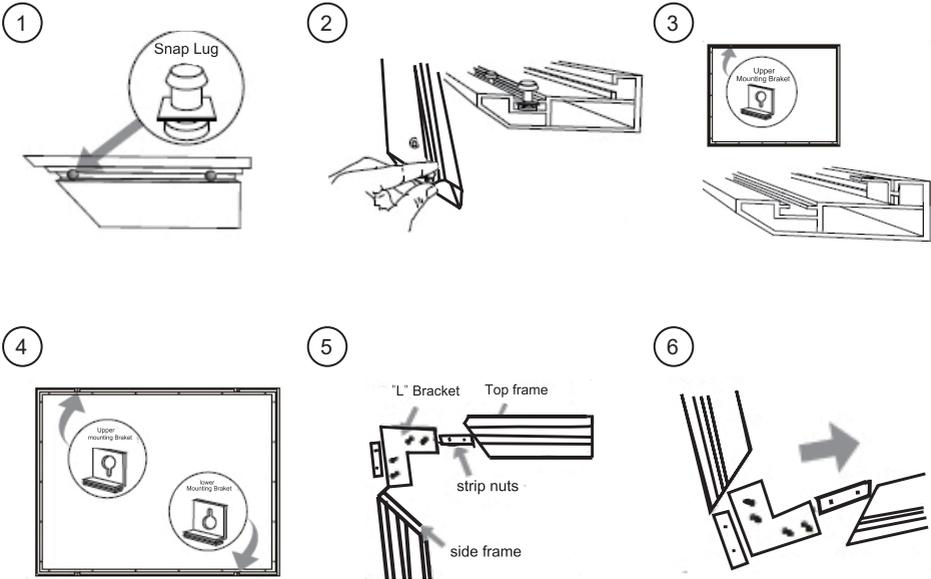


7

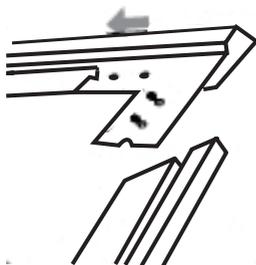

8

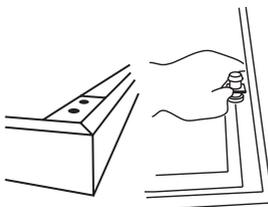

9




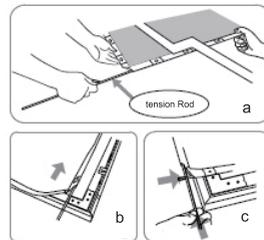


Loosen the screws in the metal brace and slide into the frame. Repeat on all frame ends. Slide corner strips on each corner of the screen. Tighten the screws securely. This will ensure the screen always remains straight and sturdy.


Roll out the screen material (white side facing down) flat on to the frame. Insert rods into the material, ensuring that they run through the outer edge of the screen.

Fasten the material by stretching it, so that the holes go over the bullets as installed earlier. (you may need two people to stretch the material)

   10

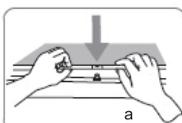

11

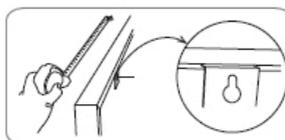

After construction, drill two screws, aligned in height and within the width of the screen into the secure parts on your wall. These secure areas include timber beams or metal frames behind the wall. Now align your screws with the brackets and hang on the wall.



Cleaning & Maintenance

In the event that the screen becomes dirty over time, please read the following instructions. If there are visible marks on the screen, clean the surface using a clean cloth and warm water. A small amount of white soap can also be mixed with the warm water. Rub the cloth lightly on affected areas until marks are gone. Then dab dry the wet area with a clean dry cloth. Also ensure that the cloth used does not leak run color. Do NOT use washing detergents, bleaches, grainy or pasty cleaning agents, or any oil or wax based agents.

Warranty

This projection screen should be installed at the best possible viewing position for the audience. Take out all the parts from the packaging and follow the accessories guideline to ensure you have all parts. The parts needed will vary depending on which installation you choose to use. For installation on a wood wall or ceiling, use the $\varnothing 5$ x 60 screws. For installation on a drywall, use the $\varnothing 10$ x 30 screws with anchors.

Product	Product Frame	Product Material
Concerto	2 years	1 year
Symphony	2 years	1 year
Kanvas	2 years	1 year
Kanvas Pro	1 year	1 year
Quantum HDR	2 years	1 year
Horizon	1 year	1 year

Elegance Customer Support

<http://elegancescreens.com.au/contact/>

Australia

02 8866 0203

enquiry@elegancescreens.com.au

Address: Unit 2, 68-72 Derby Street,
SILVERWATER 2128 NSW, Australia



elegancescreens.com.au/product/symphony/
elegancescreens.com.au/product/symphony-acoustic/
elegancescreens.com.au/product/quantum-hdr/

© 2017 Elegance Screens